





**2016 CA RESIDENTIAL
CODE**

R703.7

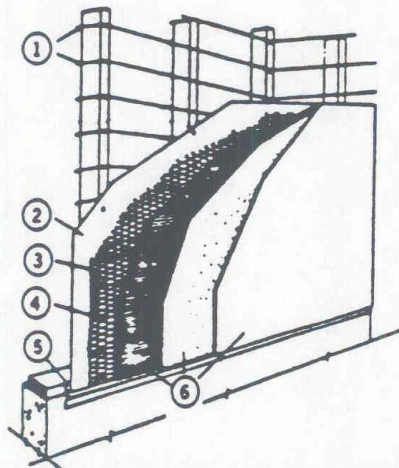


OPEN WOOD-FRAME CONSTRUCTION

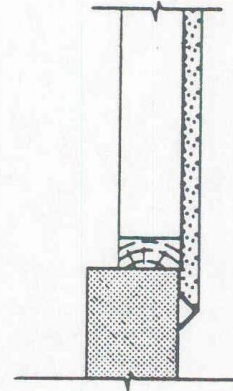


- (1) Wire Backing¹
- (2) Building Paper¹
- (3) Wire Fabric Lath¹
- (4) Furring Nails²
- (5) Drip Screed³
- (6) Three Coats of Plaster
(Scratch, Brown, Finish)

¹Paper-backed wire fabric lath may be used omitting separate wire and paper.
²Self-furring lath may be used.
³Should be used with on-grade slab construction.

NOTE: Use control joints whenever possible.

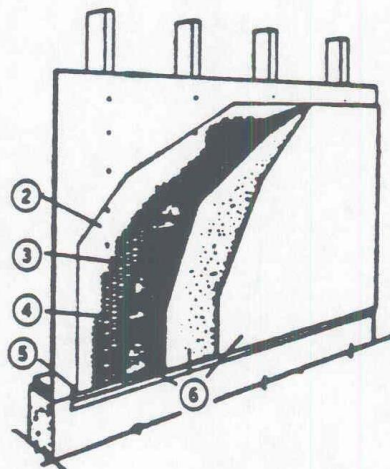

SHEATHED WOOD-FRAME CONSTRUCTION

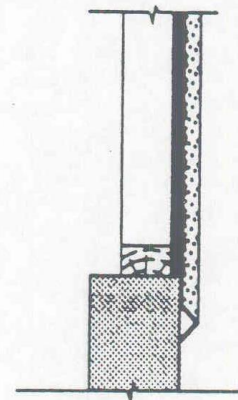

LATH AND PLASTER APPLICATION TO EXTERIOR WOOD STUD WALLS